



# G-Eye 500

 
 
 
 
 
 
GEONENQAG

---



## TABLE OF CONTENTS

---


- CAMERA OVERVIEW ..... 2**
- FIRST STEPS ..... 4**
  - Charging the battery ..... 4
  - Inserting the micro SD card..... 4
  - Using a waterproof case ..... 4
- USING THE CAMERA ..... 5**
  - Turning on ..... 5
  - Turning off..... 5
  - Recording a video..... 6
  - Taking photos ..... 6
  - Enabling/Disabling Wi-Fi ..... 6
- CONFIGURING THE CAMERA ..... 7**
  - Changing modes..... 7
  - Configuring video modes ..... 8
  - Configuring photo modes..... 9
  - General settings ..... 10
  - Default settings..... 11
- TRANSFERRING FILES ..... 12**
- DISPLAYING PHOTOS / VIDEOS ON A TV..... 12**
- ATTACHING A STICKER PAD ..... 12**
- PRECAUTIONS FOR USE..... 13**
- WARRANTIES, LEGAL NOTICES ..... 14**
  - Limited liability ..... 14
  - Warranty ..... 14
  - Legal notices..... 14

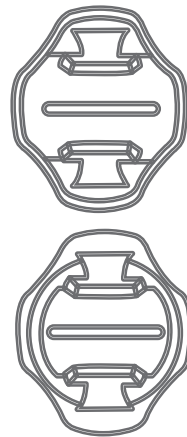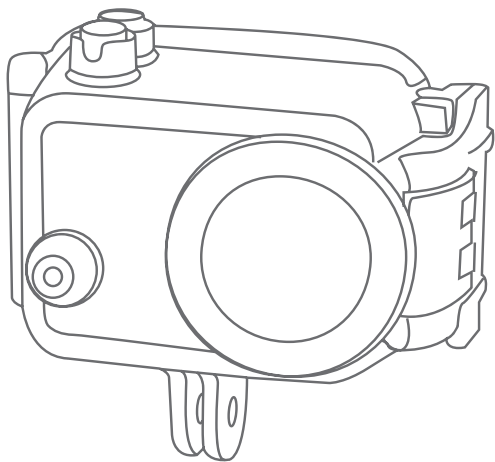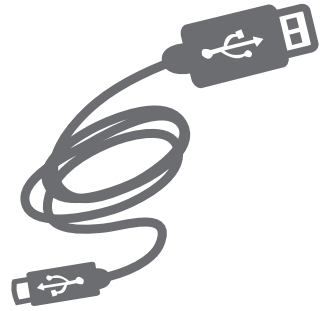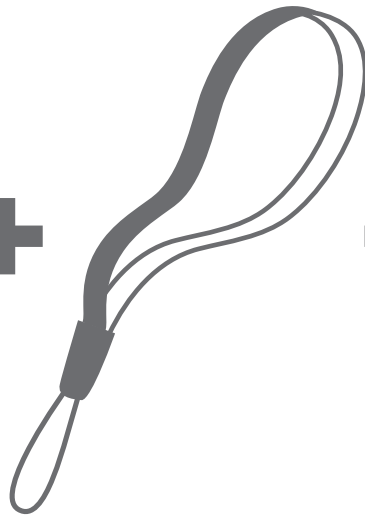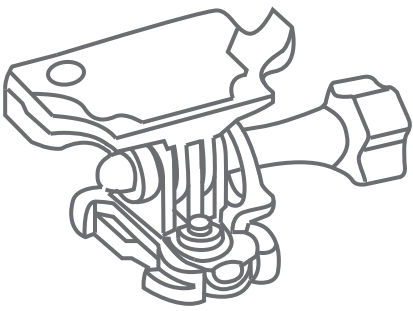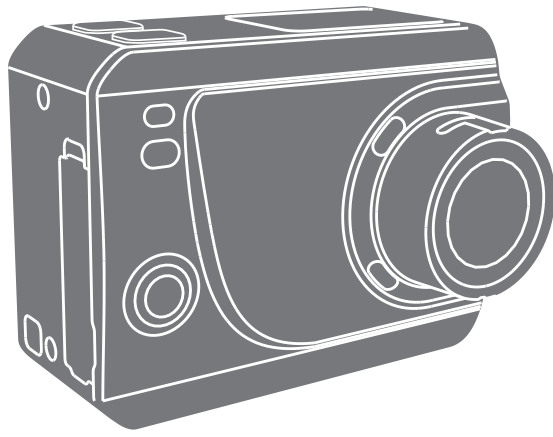

# CAMERA OVERVIEW

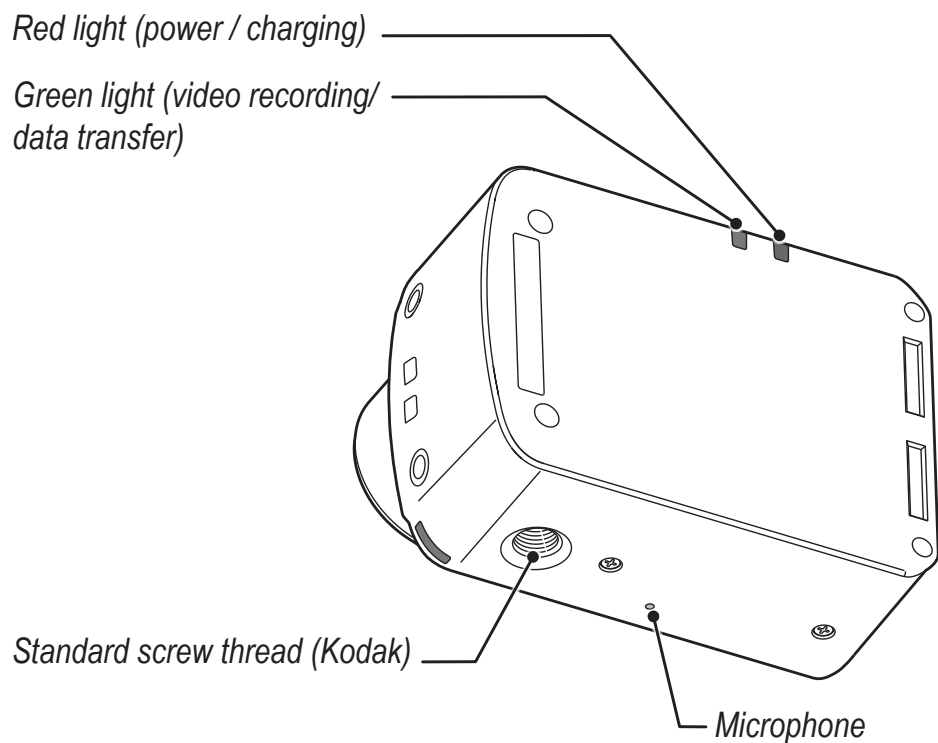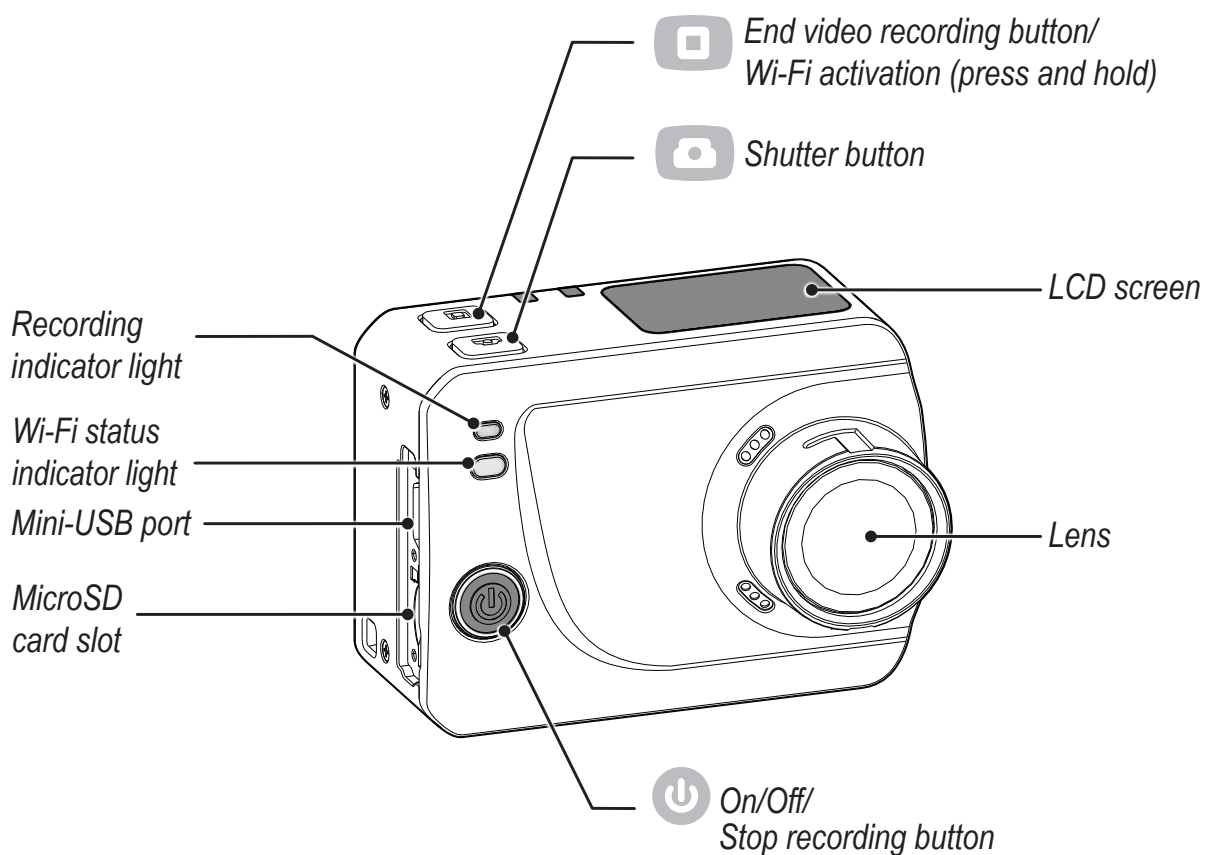  


## LCD SCREEN

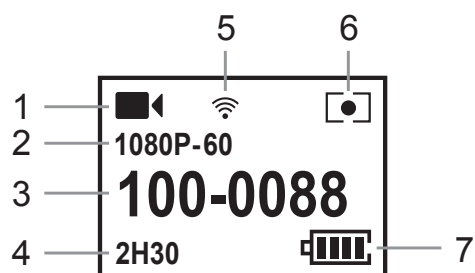 


	Icons	Functions
1		Video recording mode
		Photo mode
2	<b>1080P-60</b>	Video resolution
	<b>8MP</b>	Photo resolution
3	<b>100-0088</b>	Number of saved files
	<b>00:00:01</b>	Recording time
4	<b>02:30</b>	Remaining recording time
	<b>1888</b>	Remaining number of photos
5		Wi-Fi
6		Ambient light measurement mode
7		Battery level

# FIRST STEPS
 
## CHARGING THE BATTERY

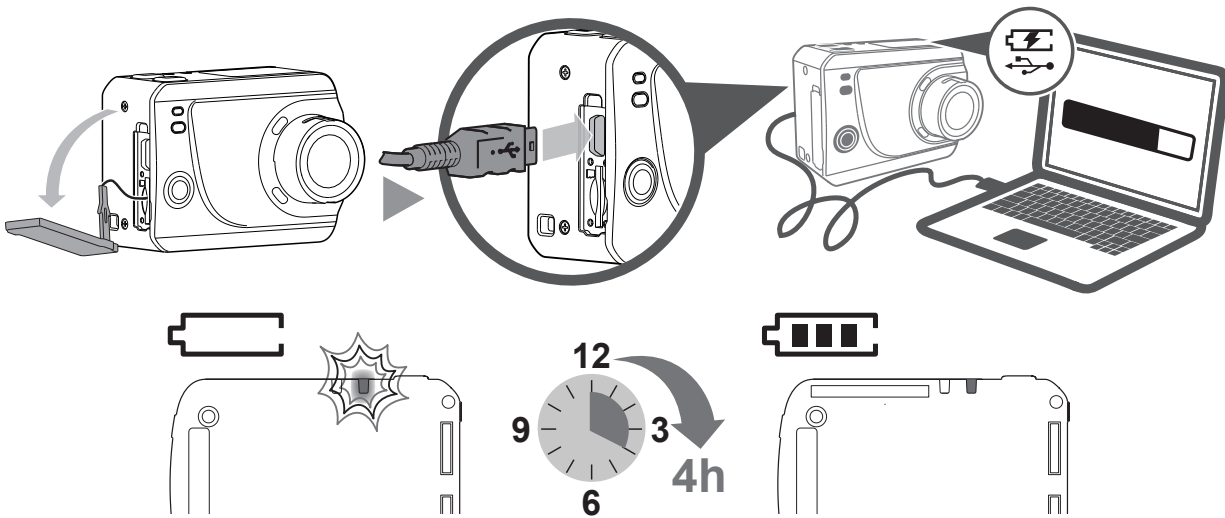


## INSERTING THE MICRO SD CARD

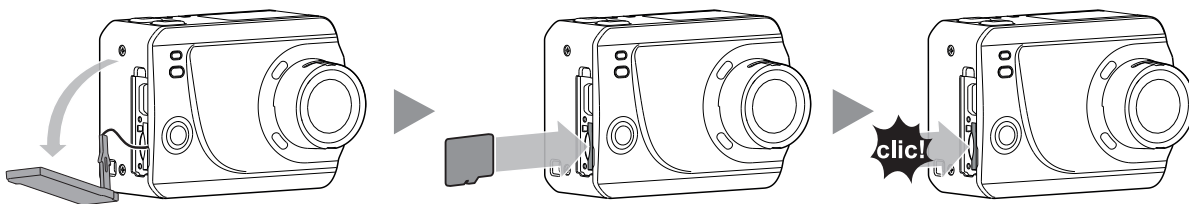 

Compatible cards: Class 10 MicroSD cards from 8Gb to 64Gb.

## USING A WATERPROOF CASE

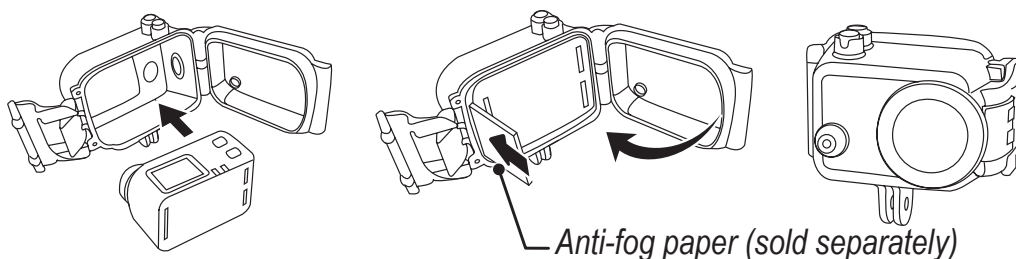 

The waterproof case has been specially designed for your G-EYE camera. It is waterproof up to 100 meters, and also provides shock protection.

It is designed to be used when performing water sports, diving or playing sports in damp environments. **Using the waterproof case greatly reduces the camera's sound recording ability.**

### CAUTION

→ In order to guarantee that it is perfectly watertight, it is important that the seal gasket is kept clean. Dust or grains of sand could be enough to create a leak in the case. You can easily remove the gasket to rinse it in clean water. Dry the

gasket and reinstall in the correct direction.

 
- In order to limit the presence of fog or condensation in the case caused by temperature differences between the inside and outside of the case, **we strongly recommend that you place anti-fog paper in the case every time you use it.** This accessory is sold separately in all DECATHLON shops and at [decathlon.com](http://decathlon.com).

---


## USING THE CAMERA

---


### TURNING ON

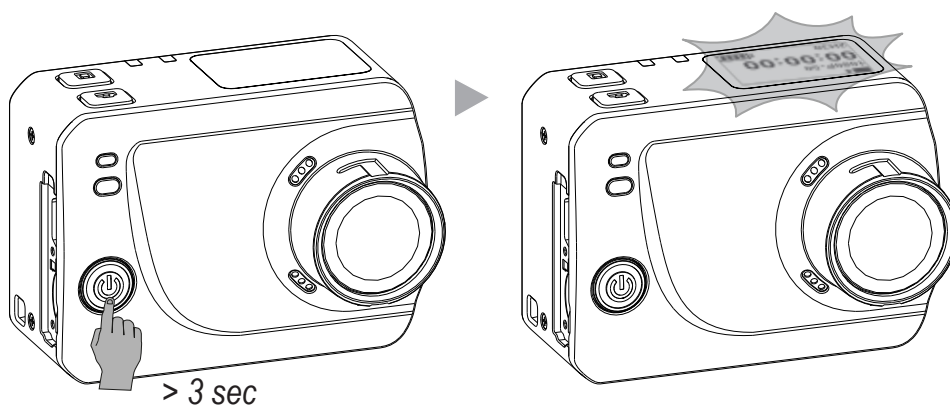

### TURNING OFF

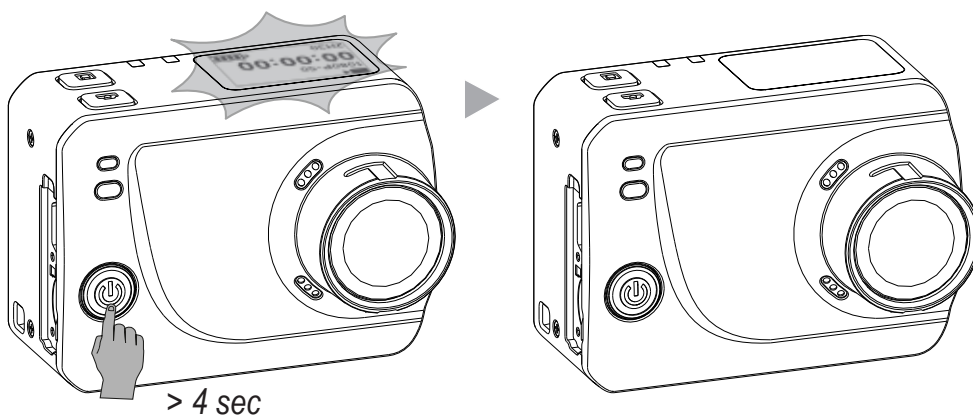 


## RECORDING A VIDEO

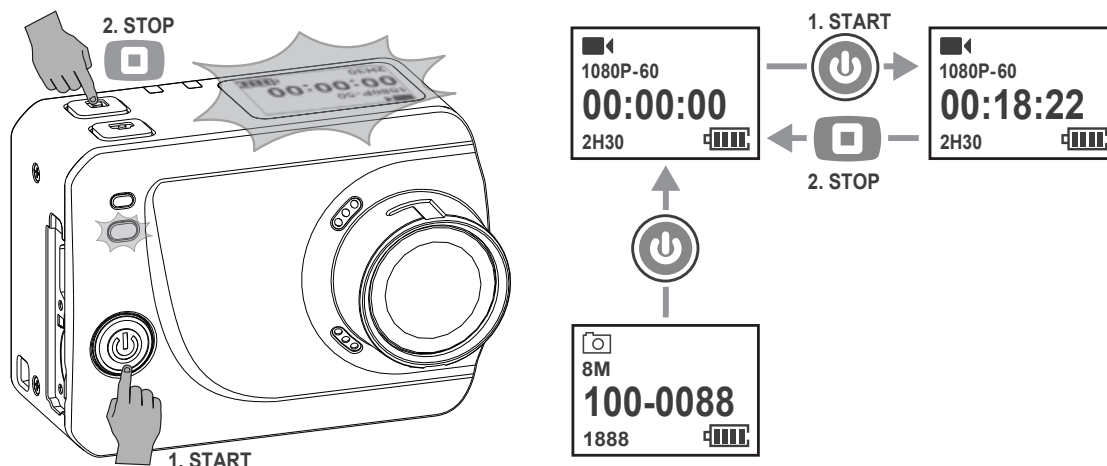 


The GEONAUTE G-EYE 500 camera is equipped with 2 TV standards, PAL and NTSC, which you can choose between in the general settings (see page 10).

## TAKING PHOTOS

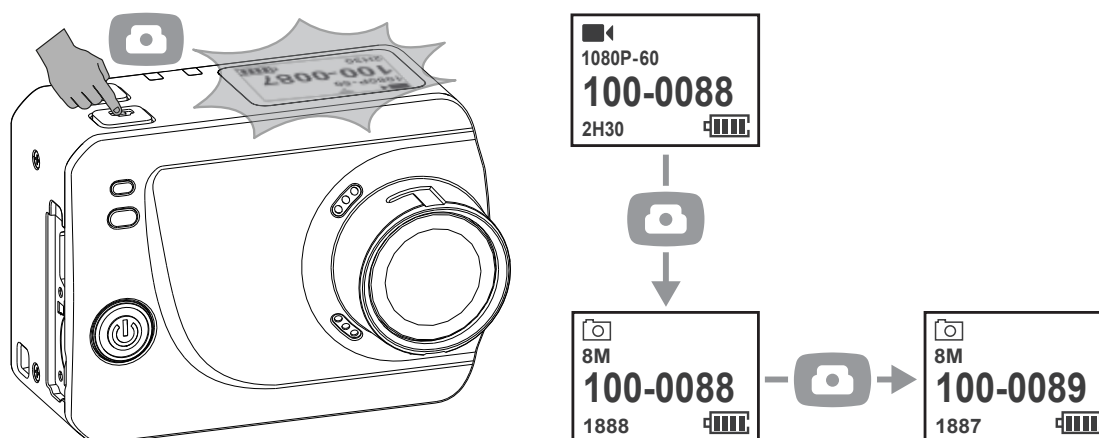 

## ENABLING/DISABLING WI-FI

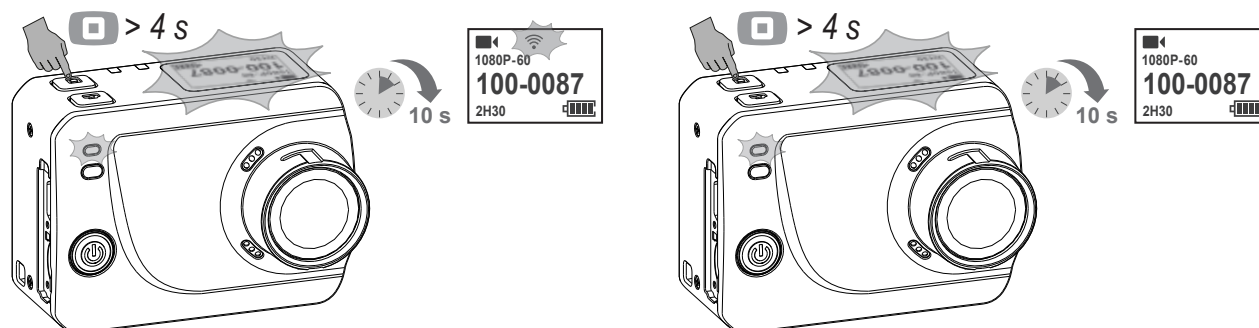 

This camera features Wi-Fi technology which includes 2 options (AP for use with a smartphone or STA for use with a remote control – see settings on page 10).

Once Wi-Fi is activated, you can choose to:

- Control and configure your camera from your smartphone by downloading the 'G-Eye APP', available on GOOGLE PLAY (Android) and APPLE STORE (iOS). When the Wi-Fi is activated, the camera broadcasts a Wi-Fi hotspot. The network name (SSID) is the name of the camera, and the default password is: 00000000.
- Control your camera using the GEYE 2 REMOTE control, sold separately. Follow the instructions provided with the remote control.

## CONFIGURING THE CAMERA

→ Use the following buttons to navigate through all menus:



Select/  
Confirm the selection

 
 


Next screen/  
Scrolling




Previous screen

## CHANGING MODES

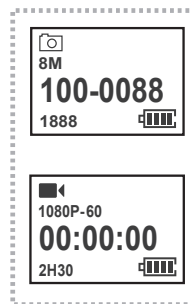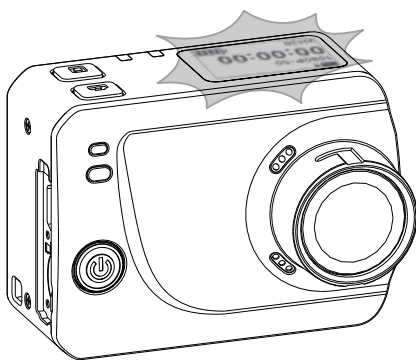

Press and hold

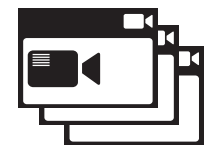 

Classic video mode (sound and image).



Video mode without sound.



 
Audio recording only.




Time-lapse video mode<sup>(1)</sup> <sup>(2)</sup>.



Video self timer.



Single photo mode.

 

Burst photo mode.



Time-lapse photo mode<sup>(3)</sup>.



Time delay photo.



Access settings for the various modes.

<sup>(1)</sup> Creates a sped-up film by recording images at regular intervals (mp4 format).

<sup>(2)</sup> Feature not available in 720 p 100/120 FPS or when using WVGA.

<sup>(3)</sup> Automatically takes photos at regular intervals (jpeg format).



# CONFIGURING VIDEO MODES



 
 


 

Menus		Options
Classic video mode (sound and image)		
Video mode without sound		
Audio recording only		
Time-lapse video mode <sup>(1)</sup>		Time interval between video images: 1/2/5/10/30 sec.
Video self timer		Video time delay: 5/10/20 sec.
Video resolution <sup>(2)</sup>		1920 x 1080 60 fps, 16:9 1920 x 1080 30 fps, 16:9 1280 x 720 120 fps, 16:9 1280 x 720 60 fps, 16:9 848 x 480 240 fps, 16:9 848 x 480 120 fps, 16:9
Viewing angle <sup>(1)</sup>		Wide/Medium/Narrow/Small.
Video bitrate <sup>(3)</sup>		Standard video bitrate/ High video bitrate.
Continuous recording <sup>(4)</sup>		Enable/disable continuous recording.
Self-righting image <sup>(5) (6)</sup>		Enable/disable vertical image self-righting.

Menus		Options
Insertion of the date <sup>(6)</sup>		Enable/disable insertion of the date into the video.

- (1) Feature not available in 720 p 100/120 FPS or when using WVGA.
- (2) The number of frames per second (**fps**) can change depending on the TV standard selected (see page 10). The maximum FPS given is for the NTSC TV standard. If you select PAL, 30 fps becomes 25 fps, for example.
- (3) A high video bitrate will give better image definition but will use more memory space.
- (4) When the memory card is full, the camera overwrites the oldest file in order to continue recording.
- (5) May be required if the camera is positioned vertically.
- (6) Feature not available in 1080 p 50/60 FPS, 720 p 100/120 FPS or when using WVGA 200/240 FPS.

## CONFIGURING PHOTO MODES

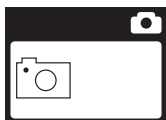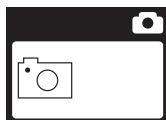
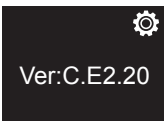 


Menus		Options
Single photo mode		
Burst photo mode		Number of photos per second: 3/6/8.
Time-lapse photo mode		Interval of time between photos: 0.5/1/2/3/5/10/20 sec.
Photo self timer		Photo time delay: 3/5/10 sec.
Photo resolution		8 MP
Insertion of the date		Enable/Disable insertion of the date into the photo.

# GENERAL SETTINGS



Menus		Options
Beep		Enable/disable beep: OFF: no beep MIDDLE: 50% volume STANDARD: 100% volume
LED indicators		Enable/disable camera status indicators.
Display info <sup>(1)</sup>		Enable/disable display of contextual information on the screen when taking photos.
Brightness settings <sup>(2)</sup>		Enable/disable ambient light measurement in the central area of field of vision.
Automatic standby		Enable/Disable automatic standby. OFF/2 min/5 min/10 min.
TV standard		Select the TV standard: PAL (50 Hz)/NTSC (60 Hz) <sup>(3)</sup> .
Wi-Fi		Configure Wi-Fi: AP for smartphone app/ STA for remote control.
Language		Select the language.
Date		Set the date and time.
Delete files		Delete files or format the micro SD card.

Menus		Options
RESET		Return to default settings (see page 11).
Firmware version		Camera software version number.

(1) Feature for use with the G-EYE2 LCD BACKPACK accessory.

(2) The camera automatically adjusts the ISO sensitivity based on the amount of ambient light.

(3) In PAL format (50 Hz) the frame rate (images per second) will be 25/50/100 FPS depending on the chosen resolution.

In NTSC format (60 Hz) the frame rate (images per second) will be 30/60/120 FPS depending on the chosen resolution.

 
## DEFAULT SETTINGS

<b>Video</b>	Resolution	1920 x 1080 @ 60 fps
	Angle of vision	Wide-angle
	Video bit rate	High
	Loop recording	Deactivated
	180° image flipping	Deactivated
	Displaying the date	Deactivated
<b>Photo</b>	Resolution	8 megapixels
	Shooting mode	Single
	Displaying the date	Deactivated
<b>General</b>	Beep sound	100%
	LED indicator	Activated
	Automatic standby	Deactivated
	TV output	NTSC

---

## TRANSFERRING FILES

---

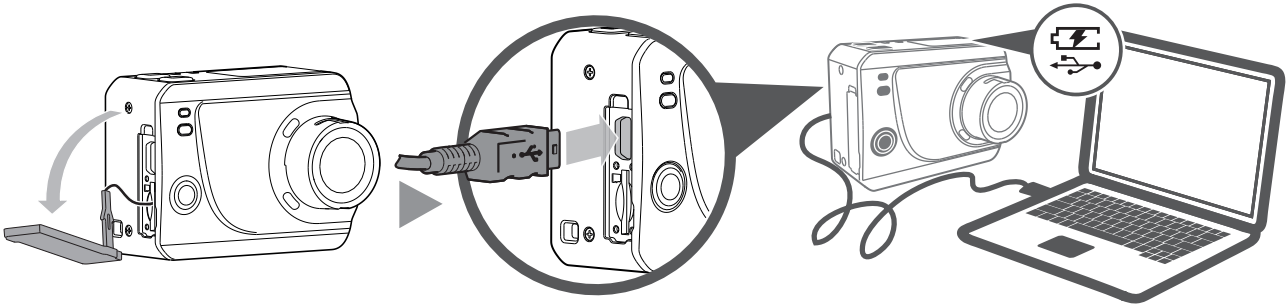

Then retrieve the files as if they were on a USB drive.

---

## DISPLAYING PHOTOS / VIDEOS ON A TV

---

Using a mini-USB/COMPOSITE AUDIO VIDEO cable and the "G-Eye 2 LCD" accessory (these two products are sold separately), you can display your photo and video content on your television.

 
---

## ATTACHING A STICKER PAD

---

The sticker pads are meant to be used to affix your camera to smooth, hard, rigid surface. 3MTM stickers provide highly resistant adhesion. However, the precautions for affixing the pad must be respected.

- Clean and dry the surface upon which you will be affixing the pad.
- Make sure that the surface is as smooth as possible.
- Affix the pad in a dry environment with a moderate temperature, preferably indoors.
- Let set for 24 hours before use.

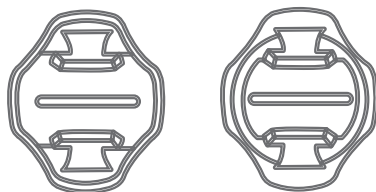


**NOTE:** This pad cannot be used a second time, be can be cleanly removed by heating with a hair dryer, for example.

---

## PRECAUTIONS FOR USE

 ---

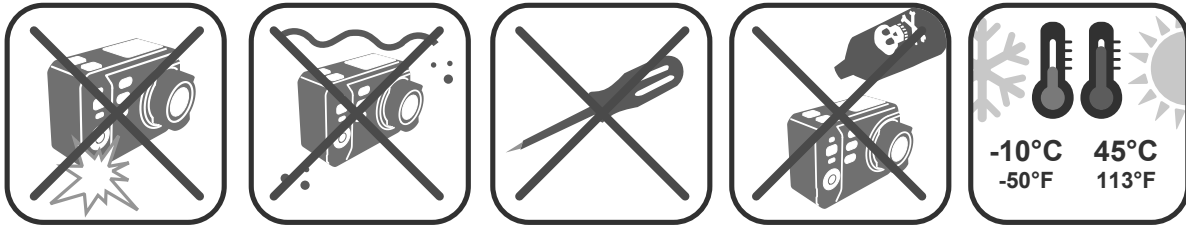

- Handle the device with care. Do not drop or expose it to serious impacts.
- Caution, this product is not waterproof without its waterproof case. Do not expose it to water or submerge it.
- For greater safety, do not touch the buttons while in use. Losing concentration can be dangerous.
- Do not disassemble this product as this could cause damage and void the warranty.
- Using this device in extreme cold (at temperatures below  $-10^{\circ}\text{C}$ ) could cause a decrease in the battery's capacity, and hence reduce the product's battery life.

# WARRANTIES, LEGAL NOTICES

## LIMITED LIABILITY

- **GEONAUTE** is not responsible for accidents or injuries that result from handling or use of this product while participating in high-risk sports. Specifically, **GEONAUTE** wishes to inform the user about the possible risk of losing concentration due to handling the product in dangerous conditions.
- The user is warned that s/he assumes all legal responsibility for the shooting, sharing, and publishing of images captured by this product.

## WARRANTY

- **GEONAUTE** guarantees the original buyer that this product is free of defects due to materials or manufacture for two years starting from the date of purchase. Please ensure that you keep the invoice as proof of purchase.
- The warranty does not cover damage resulting from misuse, from a failure to respect the precautions for use, from accidents, from improper maintenance or from commercial use of the product.
- The warranty does not cover damage resulting from repairs carried out by persons not authorised by **GEONAUTE**.
- The warranties herein expressly supersede all other warranties, including the implicit warranty of fair marketable quality and/or fitness for purpose. Under no circumstances will **GEONAUTE** be held liable for any damage, whether direct or indirect, general or specific, caused by or related to the use of this instruction manual or the product it describes.
- During the warranty period, the item will either be repaired free of charge by an authorised repair service or replaced free of charge (depending on the distributor).
- The warranty does not cover the battery or cracked or broken casings showing visible signs of impacts.

## LEGAL NOTICES

 
### EC DECLARATION OF CONFORMITY



OXYLANE hereby declares that the G-EYE 500 device complies with essential requirements and with other relevant stipulations of the 1999/5/EC directive.

The EC declaration of conformity is available at the following web link: [www.geonaute.com/en/ec-declaration-conformity](http://www.geonaute.com/en/ec-declaration-conformity).

### RECYCLING

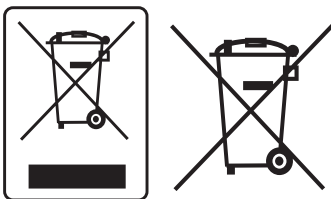

The 'crossed-out dustbin' symbol indicates that this product and the batteries it contains cannot be disposed of with household waste. They must be disposed of via selective waste sorting.

The product and batteries must be recycled at a collection point at end of life. Recycling your electronic waste protects the environment and your health.

### CONTACT US

Contact us at [www.support.geonaute.com](http://www.support.geonaute.com).

# GEONAUTÉ.COM

Fabriqué en chine  
Made in China  
Fabricado na China  
Произведено в Китае  
İmal edildiği yer Çin  
中国 制造  
中國 製造

商标 Geonaute  
以下标示仅在中国大陆地区适用  
产品等级：合格品  
质检证明：合格  
上海莘威运动品有限公司,  
上海市闵行区申北路2号  
邮编:201108

IMPORTADO PARA BRASIL POR IGUASPORT Ltda  
CNPJ : 02.314.041/0001-88

540-0011 大阪市中央区農人橋1-1-22 大江ビル10階  
ナチュラムイーコマース株式会社

Импортер: ООО «Октобл», 141031, Россия, Московская область,  
Мытищинский район, МКАД 84-й км., ТПЗ «Алтуфьево»,  
владение 3, строение 3, +7(495)6414446  
для занятий спортом

台灣迪卡儂有限公司  
台灣台中市408南屯區大墩南路379號  
諮詢電話: (04) 2471-3612

TURKSPORT Spor Ürünleri Sanayi ve Ticaret Ltd.  
ŞtiOsmaniye Mahallesi Çobançeşme  
KoşuyoluBulvarı No: 3 Marmara Forum Garden Office  
0B Blok 01 Bakırköy 34146 İstanbul, TURKEY

Ref. : 1860924

Производитель и адрес, Франция:

**DECATHLON**

DECATHLON - 4 Boulevard de Mons - BP 299  
59665 Villeneuve d'Ascq cedex - France

