


1

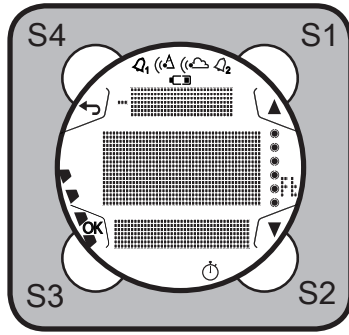


### Functions of buttons and symbols

- S1 : Start, stop, increment, save
- S2 : Split times, decrement, change view
- S3 : Change mode, preset the following event, confirm
- S4 : Back lighting, enter and leave the settings press and hold to access the settings menu

- Alarm 1
- Altitude warning signal
- Barometer warning signal
- Alarm 2
- Activity indicator
- Scroll bar

2


### Navigation system

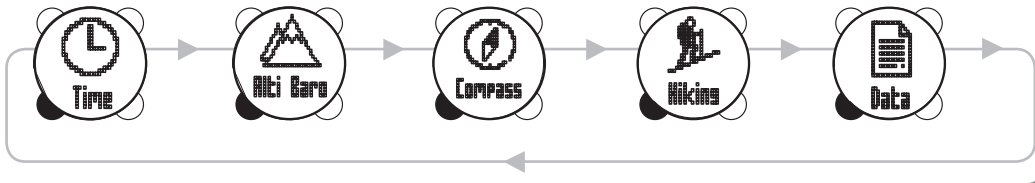


3

### SETTING

EASY!

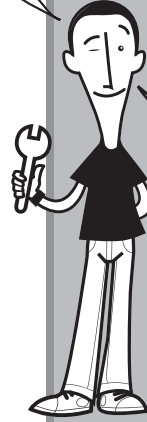


1 All the settings in the SETTING menu

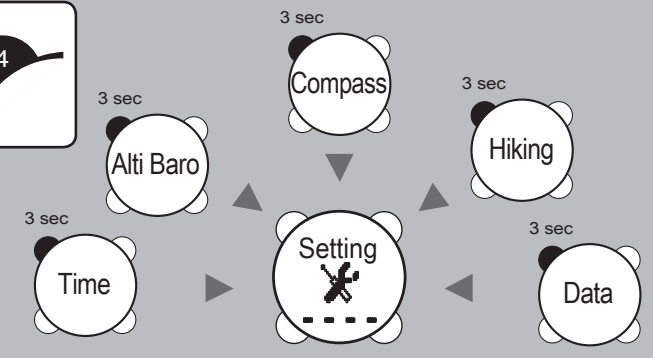


2 Tree diagram for the SETTING menu

- Calibrate
- Location
- Watch
- Hiking
- Units
- > Alti / Baro > Compass
- > Continent - Country - City
- > Time > Date > Alarm > Beep
- > Display > Alti target > Baro alarm
- > Altitude > Pressure > Temperature

### 3 Context help menu

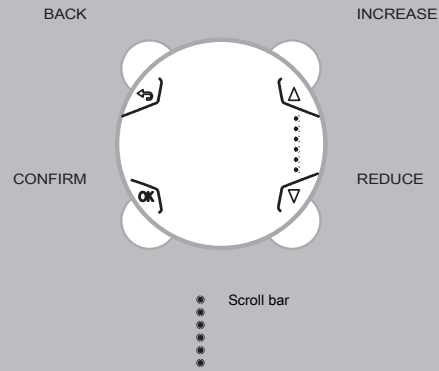

### 4 Example of time

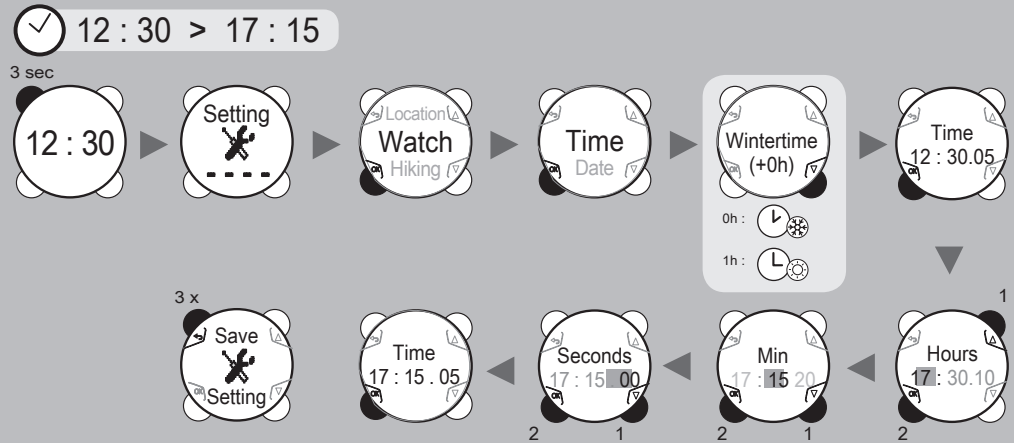

#### ALTI BARO

#### Altimeter




VIEW 1  
ALTI

1326m/h  
Climbing speed

6780m  
Altitude

12:30  
Time

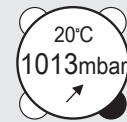

VIEW 2  
BARO

20°C  
Temperature

1013mbar  
Sea level pressure

Weather indicators

#### SETTING



Change in the weather? Remember to calibrate your product



1459 m

Calibrate > Alti



Calibrate > Baro



Alti target

Target altitude


Hiking > Alti targ. > Target (1459m)

Hiking > Alti targ. > Target alarm > (on/off)


Baro alarm

Storm warning

- ↗ Weather improving; stable, fine weather
- ↘ Sunny spells, fine weather, few clouds
- Stable weather
- ↖ Deterioration, cloud cover
- ↙ Significant deterioration, risk of rain
- ↓ Storm warning


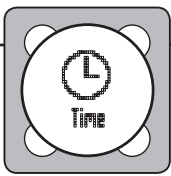


# Time


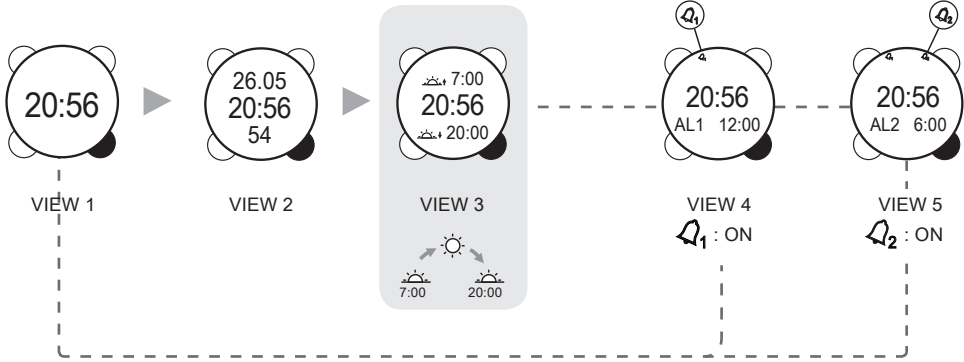


**SETTING**

- Setting > Watch > Time
- Setting > Watch > Date
- Setting > Watch > Alarm
- Setting > Location > Continent  
+ Country  
+ City

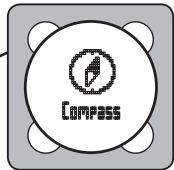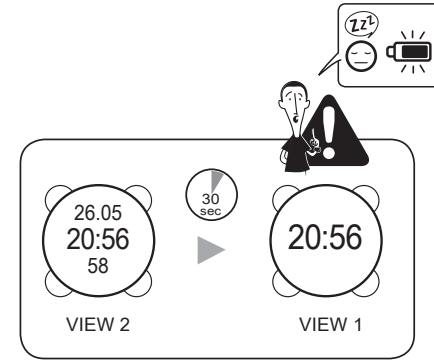

# Compass

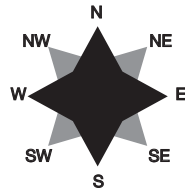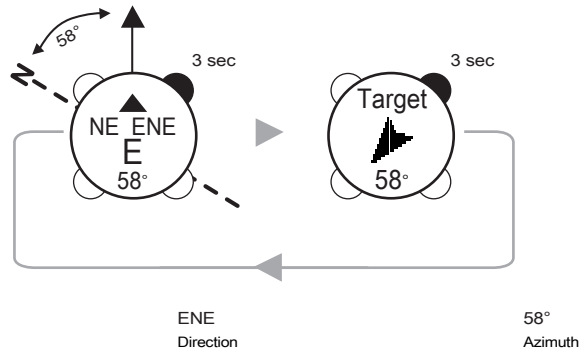

**SETTING**

Calibrate the compass prior to use

Calibrate > Compass

Hold horizontal


Turn Watch 360°


Turn 45 sec

Calibration OK ✓

Calibration Failed ✗


Watch > Location > Continent + Country + City

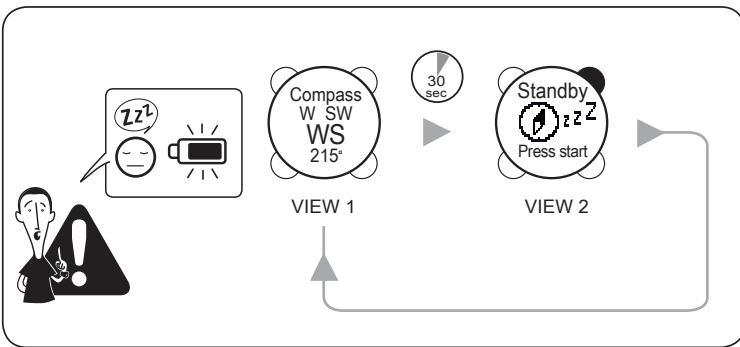

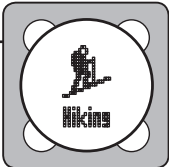

# HIKING

## Activity log

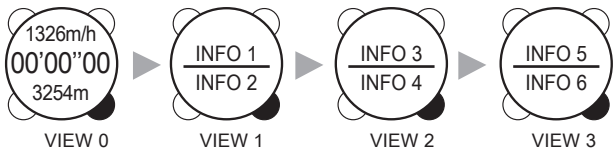


VIEW 0  
Standard view

1236m/h  
Climbing speed

00'00''00  
Chronograph


3254m  
Altitude

## START AN ACTIVITY

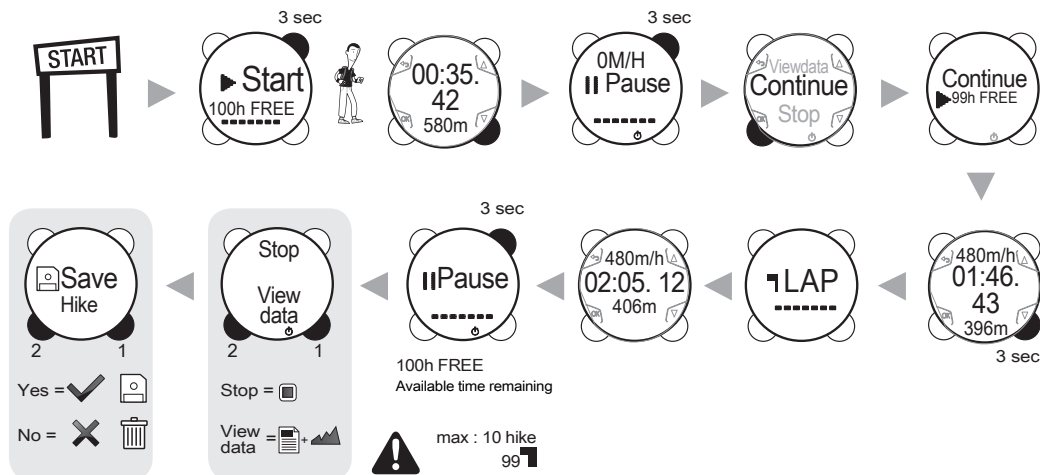

# SETTING

## Screen personalisation

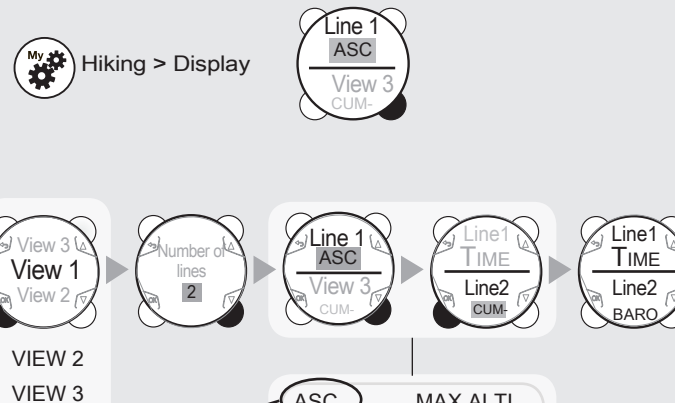

- ASC
- MAX ALTI
- AVG ASC
- MAX ASC
- DSC
- AVG DSC
- MAX DSC
- CHRONO
- CHRO-
- NO
- TIME
- ALTI
- MIN ALTI
- COMPASS
- BARO
- MAX BAR
- MIN BAR
- TREND
- TEMP
- MIN TEMP
- MAX TEMP
- CUM+
- CUM-
- CUM-
- DIFF
- DIFF

# ASC

## LIST OF VALUES

<p><b>⏏</b> (information) since the previous lap</p> <p>AVG Average (of information)</p> <p>MIN Minimum (of information)</p> <p>MAX Maximum (of information)</p>	<p>ASC Climbing speed</p> <p>DSC Speed of descent</p> <p>CHRONO Chronograph</p> <p> Time of sunset</p> <p>ALTI Altimeter</p> <p>COMPASS Compass</p> <p>TEMPS Temperature</p> <p>CUM+ Positive total</p>	<p>CUM - Negative total</p> <p>DIFF Difference in altitude from your starting point start</p> <p>TOTAL Total chronograph</p> <p>START Start time</p> <p>END End time</p> <p>TARGET Target altitude</p> <p><b>2</b> TARGET Time elapsed above the target altitude</p>
--	---	--

DATA

### Exercise report



MEMORY :

3 / 10  
hikes

CONSULT :

HIKE 1  
HIKE 2  
HIKE 3

DELETE :

HIKE 2

CLEAR ALL :

HIKE 1+2+3




HIKE 2  
HIKE 3



TOTAL  
START  
END  
MAX ALTI  
MIN ALTI  
AVG ASC  
MAX ASC  
AVG DSC  
MAX DSC  
CUM +  
CUM -  
TARGET.

 TARGET



LAP 2  
LAP 3  
...




MAX ALTI  
MIN ALTI  
AVG ASC  
MAX ACS  
AVG DSC  
MAX DSC  
CUM +  
CUM -  
TARGET  
TARGET



GEONAUTÉ.COM



Contact us

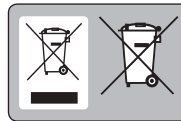

Take the batteries and unusable electronic products to an authorised collection area for rec clin.



Please note: if you note that the display is flashing unusually or doesn't appear to be working correctly, this usually means that the watch battery is low and needs to be replaced. To change the battery: contact the retail outlet where you bought your product. If you change it yourself, you risk damaging the seal and impairing the waterproof design as well as voiding your warranty. Battery life is influenced by the length of time it is stored in the shop and the way in which you use the product.



The product has a 2 years guarantee for normal usage.

