 

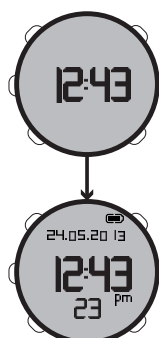 


1 Intuitive guide

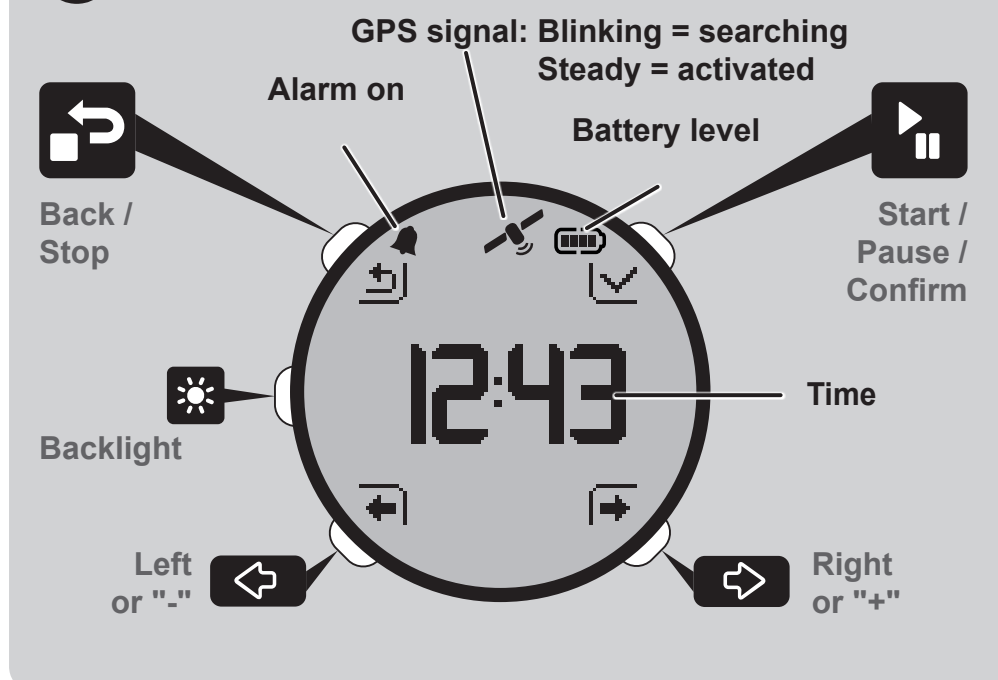








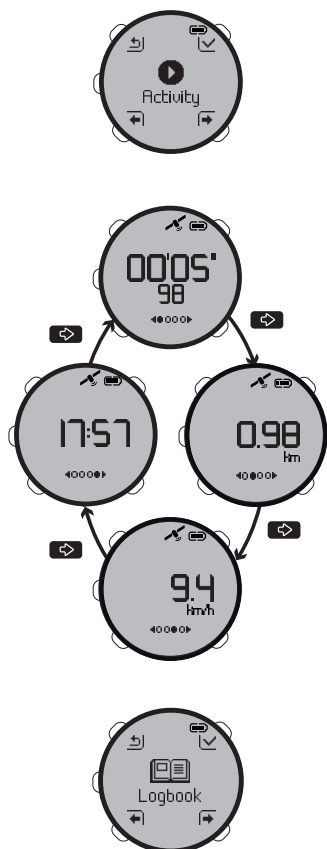 
2 First use

- To begin ▶ Press and hold 
- Follow the intuitive onscreen guide, see **1**, to set the language (FR, EN, DE, ES, IT, PT, NL, ZH), date, time, and units.



3 "TIME" Mode

- To access the Activity / Journal / Settings Mode ▶ Press 
- ▶ Choose mode:  or 
- ▶ Confirm: 
- To display date and battery level ▶ Press  or  or 












4 "ACTIVITY" Mode

- To access ACTIVITY Mode ► see ③

The watch will begin searching for a GPS signal automatically (duration: 2 min. max.):

- Move to a clear, open space away from buildings.
- Do not move while the signal is being detected.

NOTE: To stop the search, press .

- | | |
|---|---|
| ■ To begin the session | ► Press  |
| ■ To pause | ► Press  |
| ■ To see the distance*, speed*, time, stopwatch | ► Press  or  to navigate between data |
| ■ To stop the activity | ► Press  , then  |
| ■ To record the activity in the journal | ► Press  or  (to not record) |



(*) Only for outdoor activities.


5 "JOURNAL" Mode



- To access JOURNAL Mode ► see ③

- To enter into the journal ► Press , then **1** or **2**

- 1** To explore the journal ► Press 

- To navigate between recordings ► Press  or , then **A** or **B**

- A** ■ To see the details of a recording ► Press 

- To navigate between data (length, distance*, average speed*) ► Press  or 

- B** ■ To delete a recording ► Press  or , then 

- Confirm ► Press 

- 2** To delete the journal ► Press  or , then 

- Confirm ► Press 

(*) Only for outdoor activities.

6 "SETTINGS" Mode

- To access the settings ► see ③

- Choose an item to set ► Press  or 

- Confirm the selection ► Press 

- Follow the intuitive onscreen guide, see ①, for setting the data.

ALARM = sets the alarm time and turns the alarm ON and OFF

TIME = sets the time

DATE = sets the date

SOUND = turns the sound on and off (except the alarm)

UNITS = sets the units (cm/kg or inch/lb)

LANGUAGE = sets the language

ABOUT = firmware version and serial number



7 To turn off the alarm

 
- To turn off the alarm ► Press any key (except ).

NOTE: The alarm sound will turn off but the alarm itself will remain activated.

8 To turn off the watch

- During an activity ► Press and hold 
► Press  to confirm
- From any of the other screens ► Press and hold  until the watch turns off.

9 Messages

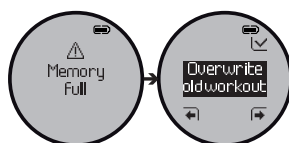

Memory full:

 = Confirm, „Erase previous recording”

 
 = Edit journal, see 5



No recordings!



GPS searching, see 4

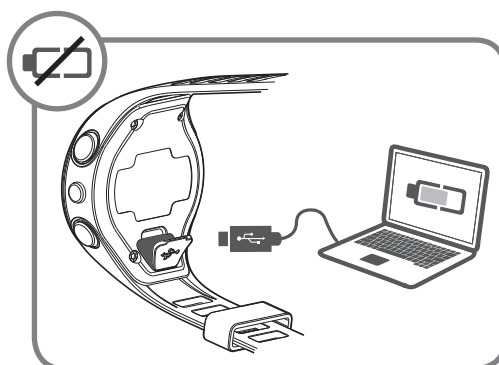

Technical characteristics

Watertightness	IPX 7 (resistant to submersion in 1 metre of water for 30 min)
Weight	52 g, 0.1 lbs, 1.8 oz
Range	7 hours GPS mode 7 days in Time mode
Full charging time	2 hours 30 minutes
Memory	7 sessions
Sampling	1 point / 5 seconds
Operational temperature	10–60°C, 50–140°F
Battery	Lithium-ion

Need help? ► support.geonaute.com

OXYLANE hereby declares that the device ONmove 50 complies with the necessary requirements and other relevant provisions set out in directive 99/5/EC. See the complete document online at: www.geonaute.com/en/ec-declaration-conformity



The “crossed-out bin” symbol means that this product and the batteries it contains must not be thrown away with general household waste. They are subject to a specific type of sorting. Please take the batteries and your unusable electronic product to an authorised collection point for recycling. This treatment of your electronic waste will protect the environment and your health.



Dispose of your batteries in a place where they will be recycled.

GEONAU^TE.com

oxylane

OXYLANE

4 Boulevard de Mons – BP 299

59665 Villeneuve d'Ascq cedex – France

CE

