


**EN****ONwalk 900****GEONAUTÉ**

## 1 INTRODUCTION




## 2 FIRST SET-UP

### 2.1 Switching on

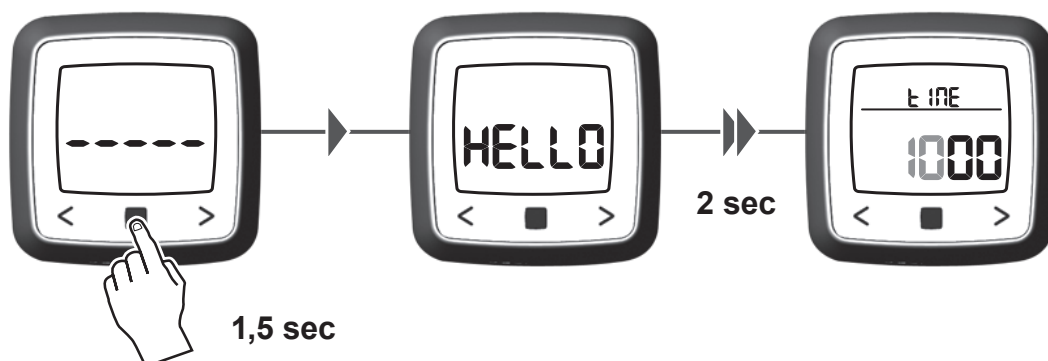


## 2.2 First settings

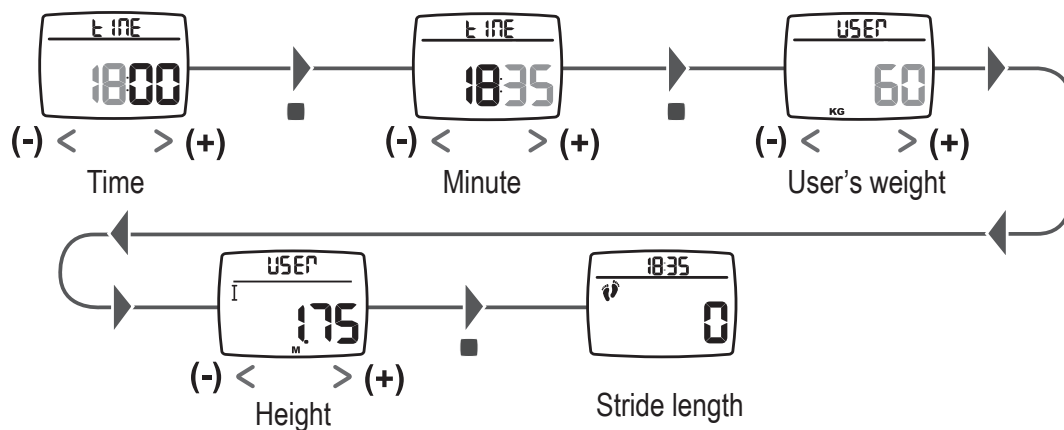

- **User's weight**: setting your weight means the amount of calories you have burned when walking can be calculated.

## 3 SETTINGS

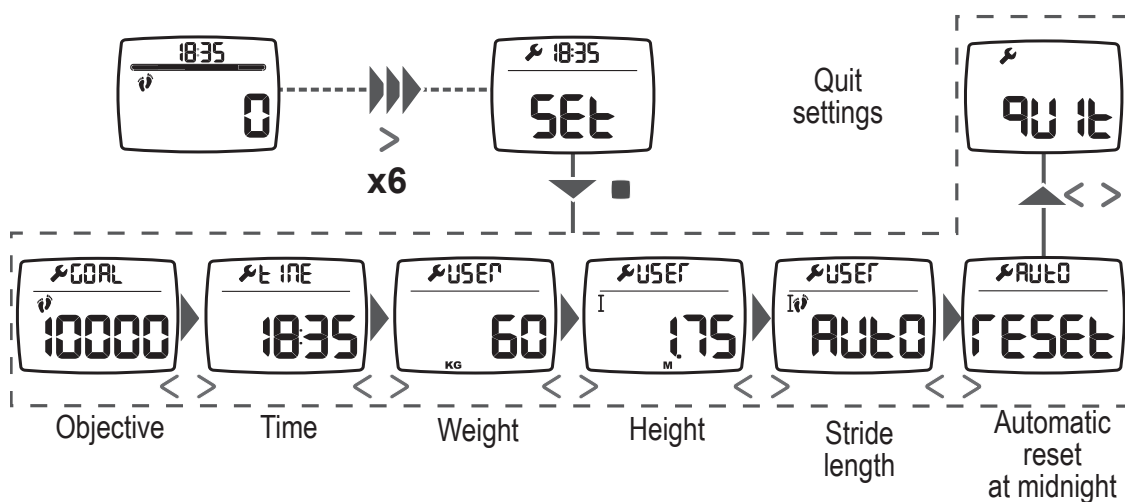


### 3.1 Activity objective


- A. Choice of objective: steps, distance, calories, walking time or disabled




- B. Choice of objective value

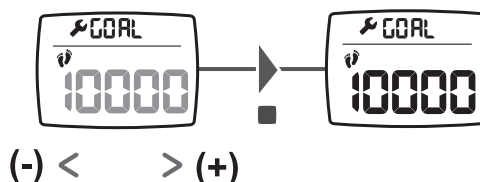


## 3.2 Time

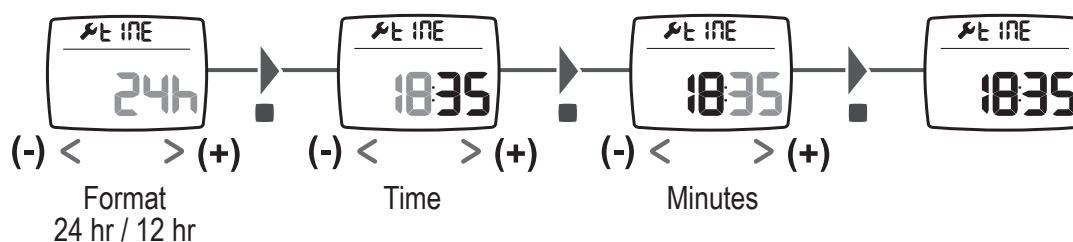

## 3.3 User's weight

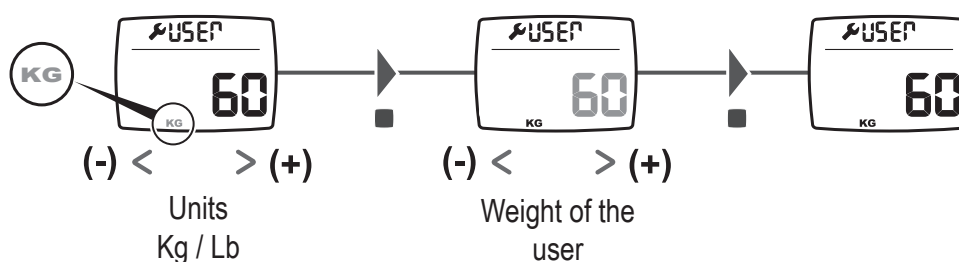


## 3.4 Height

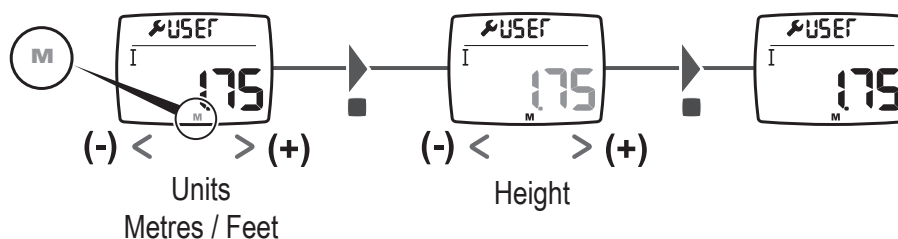

## 3.5 Stride length


By default, your stride length is calculated according to your height. If you wish to customise your stride length, please go to «Manu» mode.

To find out your stride length, walk 10 metres while counting the number of steps then do this calculation: stride length = 10 metres / number of steps.

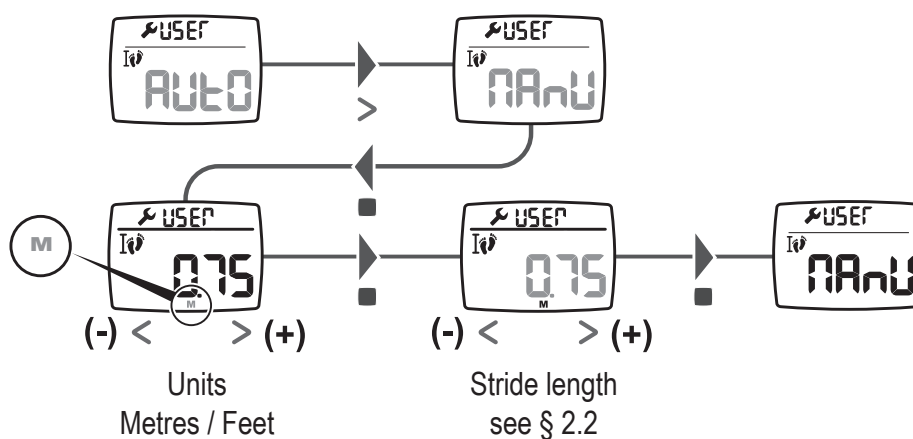


### 3.6 Automatic reset to zero at midnight

By default, at midnight each day your pedometer automatically resets all of your measurements (number of steps, distance, calories, walking time and progress towards your objective). Using this setting, you can deactivate this reset and continue measurements after midnight.

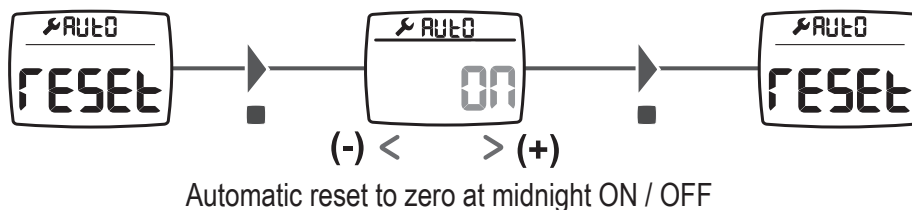

### 3.7 Quit settings mode

You can leave the settings menu at any time and return to the main menu by pressing the ■ button for 1.5 seconds.

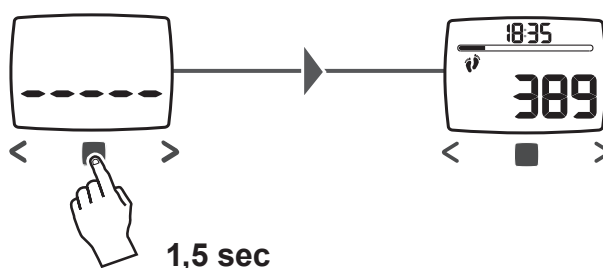


## 4 USE

### 4.1 Positioning the product




### 4.2 Viewing the information

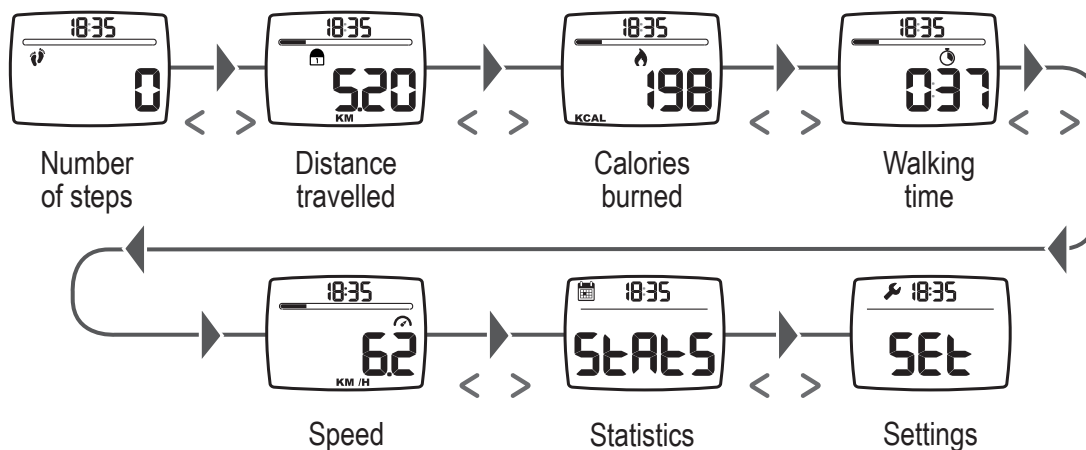


## 4.3 Starting the measurement

Your pedometer starts to measure automatically when you start walking.

## 4.4 Resetting to zero

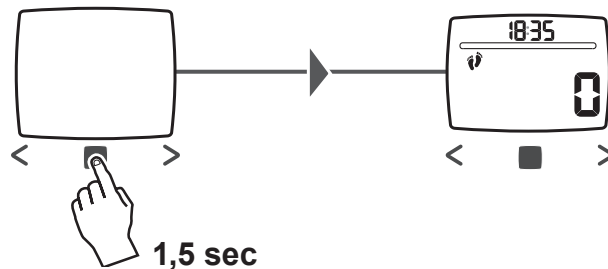

## 4.5 Automatic standby

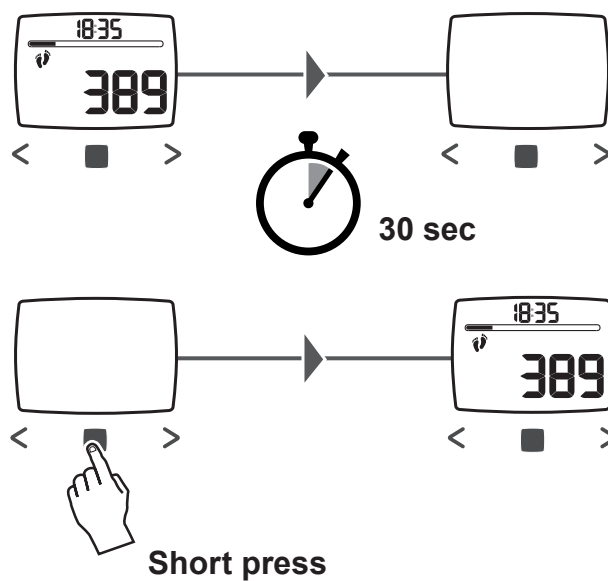

## 5 ACTIVITY OBJECTIVE

To help you achieve your objectives, your pedometer lets you define a customised objective. You have the option of defining an objective in one of these 4 categories:


- number of steps
- calories
- Distance
- walking time




You can then view your progress using the gauge on the main screen. A notification appears when your objective has been achieved.

## 6 STATISTICS


Your pedometer is equipped with a memory that allows you to see the details of your daily activities over the last 7 days.

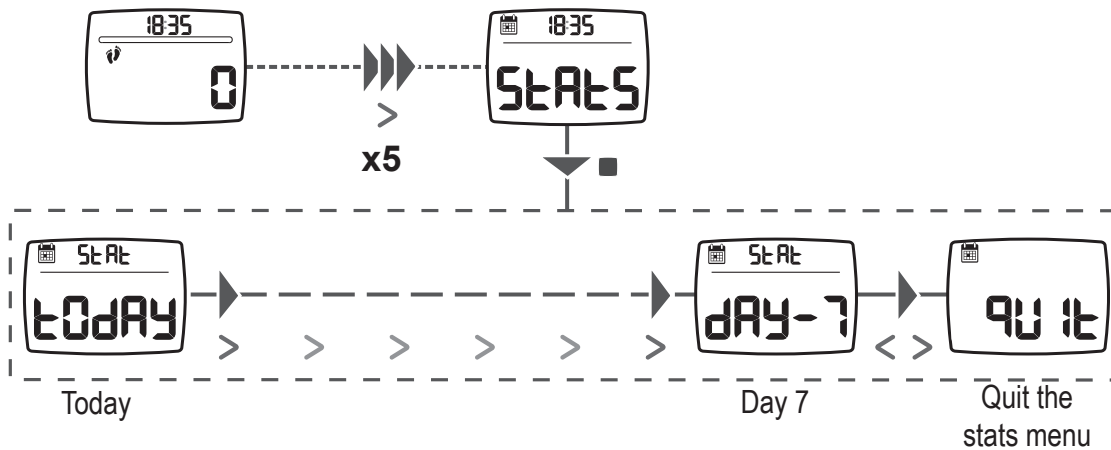

To see activity details for one of these days, select it and navigate using the  $\langle \rangle$  buttons

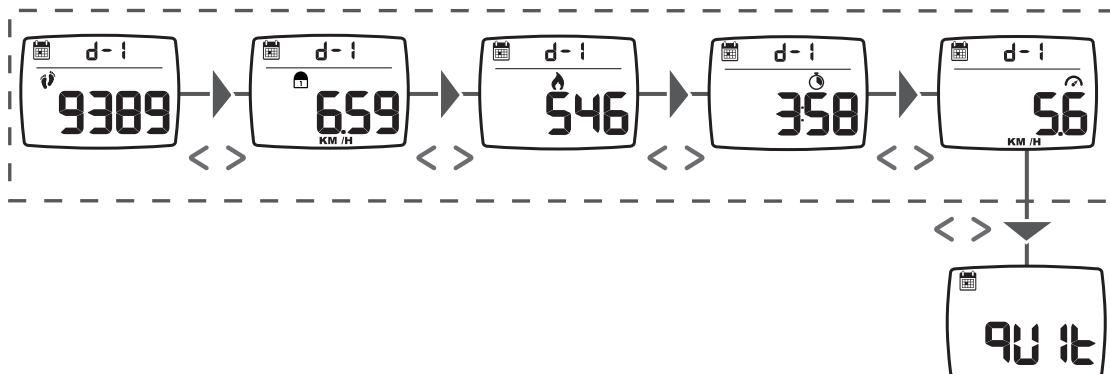


You can leave the statistics menu at any time and return to the main menu by pressing the  $\blacksquare$  button for 1.5 seconds.

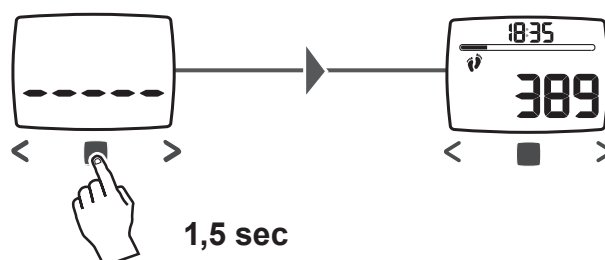

---

## 7 REPLACING THE BATTERY

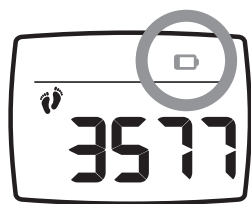

---

## 8 CONTACT US

We would like to hear your feedback on the quality, features and use of our products at: <http://support.geonaute.com>

We will reply as soon as possible.

---

## 9 PRECAUTIONS FOR USE AND WARRANTY

### Warranty

- **GEONAUTE** guarantees the original buyer that this product is free of material or manufacture defects for two years starting from the date of purchase. Keep the receipt as proof of purchase.
- The warranty does not cover damage resulting from misuse, from a failure to respect the precautions for use, from accidents, from improper maintenance or from commercial use of the product.
- The warranty does not cover damage resulting from repairs carried out by persons not authorised by **GEONAUTE**.
- The warranties herein expressly supersede all other warranties, including the implicit warranty of fair marketable quality and/or fitness for purpose. Under no circumstances will **GEONAUTE** be held liable for any damage, whether direct or indirect, general or specific, caused by or related to the use of this instruction manual or the products it describes.
- During the warranty period, the item will either be repaired free of charge by an authorised repair service or replaced free of charge (depending on the distributor).
- The warranty does not cover the battery or cracked or broken screens showing visible signs of impacts.



The algorithms used to calculate the different values displayed by your pedometer have been developed for walking and brisk walking only. The accuracy of these values will be severely reduced if used when running. Therefore, we do not recommend using this product for running.


## Batteries and recycling



To change the battery, visit the store where you purchased your product. If you change the battery yourself, you may damage the seal, affect the watch's watertightness, and void your warranty. Battery life is affected by how long the product has been at the store and how you use the product.



The «crossed out bin» symbol means that this product and its batteries cannot be disposed of with household waste. They must be disposed of via selective waste sorting. The product and batteries must be recycled at a collection point at end of life. Recycling your electronic waste protects the environment and your health. Discard your batteries in a recycling area.

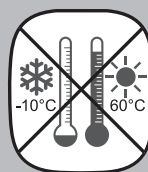

Made in Malaysia  
Fabricado na Malásia  
Произведено в Малайзии  
İmal edildiği yer Malezya  
马来西亚 制造  
馬來西亞製造

合格品

迪脉（上海）企业管理有限公司  
上海市浦东新区银霄路393号五层东侧

IMPORTADO PARA BRASIL POR IGUASPORT LtdaCNPJ : 02.314.041/0022-02

Импортер: ООО "Октобл", 141031, Россия, Московская область, Мытищинский район, МКАД 84-й км., ТПЗ "Алтуфьево", владение 3, строение 3.

台灣迪卡儂有限公司台灣台中市408南屯區大墩南路379號諮詢電話: (04) 2471-3612

TURKSPORT Spor Ürünleri Sanayi ve Ticaret Ltd.ŞtiOsmaniye Mahallesi Çobançeşme KoşuyoluBulvarı No: 3 Marmara Forum Garden Office 0B Blok 01 Bakırköy 34146 İstanbul, TURKEY

GEONAUTÉ.COM

DECATHLON

DECATHLON

4 Boulevard de Mons – BP 299  
59665 Villeneuve d'Ascq cedex – France

Ref. pack: 650.602

