
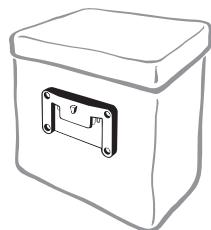


TWIST handelbaradapter

1. Make sure the TWIST lever is in an "OPEN" position, as shown in the diagram. Slide your bag downward onto the TWIST mount. The plastic tab of the bag will slide into the slot of the TWIST mount.
2. To lock the bag, twist the lever to the centered "CLOSED" position.
3. To remove your pack, simply twist the lever to the "OPEN" side and lift the pack to detach.

IMPORTANT Check your TWIST handlebar mount before each ride. If you transport the bike on a car-rack, detach the accessory.

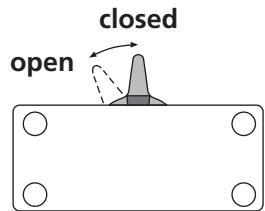

MOUNTING

1. Click both brackets on the handlebar at each side of the stem and slide the adapter on the brackets.
2. Insert four long screws through the adapter into the brackets. Tighten the screws enough to hold the handlebar adapter in position, but still allow re-positioning by hand. The handlebar bracket should be angled slightly upwards, about 30°.
3. Insert the two short screws into the bottom of the adapter but do not tighten.
4. The included unbreakable DYNEEMA cord will prevent the handlebar adapter from turning around. Wrap the DYNEEMA cord around one of the short screws and tighten it. Place the cord over the bar and under the stem as pictured.
5. Wrap the free end of the cord around the remaining screw and tighten it also.
6. Push the adapter downwards until it is stopped by the cord. Then tighten the 4 front screws. Please take care that the unit is fixed in a slightly upward position.

